 


MGateソリューション セレクションガイド

 


Device A / Device B	Modbus RTU/ASCII Slave	Modbus RTU/ASCII Master	PROFIBUS Slave	PROFIBUS Master	J1939	DNP3 Serial Outstaion	DNP3 Serial Master	DF1	Modbus TCP Server	Modbus TCP Client	Ethernet/IP Adapter	Ethernet/IP Scanner	PROFINET Controller	DNP3 TCP Outstation	DNP3 TCP Client
Modbus RTU/ASCII Slave	—	1) MB3000	—	4101	5118	—	—	—	5105	MB3000/ 2) W5x08 5109	5105	5105	3) 5103	—	5109
Modbus RTU/ASCII Master	1) MB3000	—	—	4101	5118	—	—	—	MB3000/ 2) W5x08 5109	5105/ 5109	5105	5105	3) 5103	5109	5109
PROFIBUS Slave	—	—	—	—	—	—	—	—	5101	5101	—	—	5102	—	—
PROFIBUS Master	4101	4101	—	—	—	—	—	—	3) 5111	3) 5111	—	3) 5111	3) 5111	—	—
J1939	5118	5118	—	—	—	—	—	—	5118	5118	5118	5118	5118	—	—
DNP3 Serial Outstaion	—	—	—	—	—	—	—	—	—	5109	—	—	—	—	2) W5x08 5109
DNP3 Serial Master	—	—	—	—	—	—	—	—	5109	5109	—	—	—	2) W5x08 5109	—
DF1	—	—	—	—	—	—	—	—	—	—	EIP3000	EIP3000	—	—	—
Modbus TCP Server	5105	MB3000/ 2) W5x08 5109	5101	3) 5111	5118	—	5109	—	—	—	5105	5105	3) 5103	—	5109
Modbus TCP Client	MB3000/ 2) W5x08 5109	5105	5101	3) 5111	5118	5109	5109	—	—	5109	5105	5105	3) 5103	—	5109
Ethernet/IP Adapter	5105	5105	—	—	5118	—	—	EIP3000	5105	5105	—	—	—	—	—
Ethernet/IP Scanner	5105	5105	—	3) 5111	5118	—	—	EIP3000	5105	5105	—	—	3) 5103	—	—
PROFINET Controller	3) 5103	3) 5103	5102	3) 5111	5118	—	—	—	3) 5103	3) 5103	—	3) 5103	—	—	—
DNP3 TCP Outstation	—	5109	—	—	—	—	2) W5x08 5109	—	—	5109	—	—	—	—	—
DNP3 TCP Client	5109	5109	—	—	—	2) W5x08 5109	—	—	5109	5109	—	—	—	—	—

1) MB3270/3660にのみ適用 2) W5x08=W5108/W5208 (IEEE802.11a/b/g/nサポート) 3) 2017年12月に出荷予定



MGate MB3000



MGate MB3660



MGate EIP3000



MGate 4101-MB-PBS



MGate 5101-PBM-MN



MGate 5102-PBM-PN



MGate 5105-MB-EIP



MGate 5109



MGate 5118



MGate W5108/W5208

▶ 詳細については、こちらをご覧ください: www.moxa.com/protocol-gateway